

# INGLEWOOD CIVIC CENTRE

## Basic Stage Lighting Operating Instructions

As of February 2023



0412 88 1972

# INGLEWOOD CIVIC CENTRE

## Basic Stage Lighting Operating Instructions

As of February 2023

- The LSC “MANTRA” stage lighting control desk is the new stage lighting controller and is kept in a black moulded road case in the storeroom of the centre. **(Please refer to Photo #1)**
- Connect the “Mantra” to the Lighting Control cable,(5PIN Plug) stored within the large lock box. **(See Photo #2)**
- Then power up the “Mantra” via the mobile equipment rack that has power boards on the rear.
- Go to the backstage area (Prompt Side/ Stage Left) and proceed to the upper level via the stairs. You will find an equipment area called the Dimmer/Patch area where some additional equipment will need to be turned on. **(See Photo #5)**
- Turn on the Jands WM dimmer via the three-phase switch located to the left of dimmer. This will power the older tungsten halogen stage lights. **(See Photo #5)**
- Turn on the General Power Outlet adjacent to the three-phase power outlet. This will power the LED stage lighting fixtures.
- Go back to the FOH control area and bring up the RED MASTER fader to full, then bring # 1 RED fader up. You should see some stage lighting now on stage.
- PLS has recorded various lighting scenes on each of the **12 PLAYBACK CHANNELS on PAGE 1 (See Photo #3)**
- On each of the Red Faders, there are a number of pre-sets that can be triggered by pushing the push button directly below the fader. **(See for example Red fader 1 shown on Photo #4)**



**PHOTO # 1**

INGLEWOOD CIVIC CENTRE



LSC "MANTRA LIGHTING DESK POWER AND STAGE CONTROL CABLES

**PHOTO 2**

INGLEWOOD CIVIC CENTRE






"MANTRA" STAGE LIGHTING DESK

PHOTO 3

INGLEWOOD CIVIC CENTRE

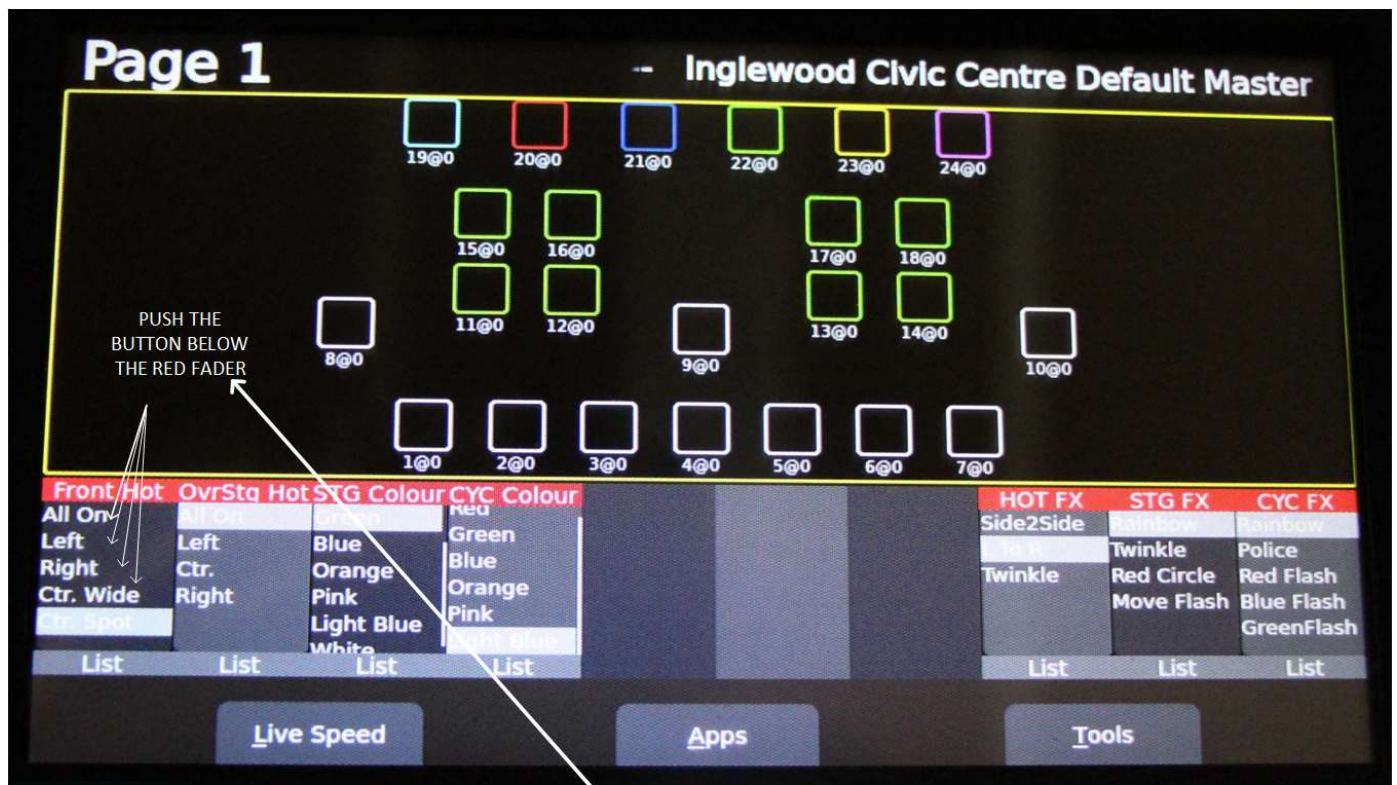

FOR EXAMPLE RAISE THE RED # 1 FADER YOU SHOULD SEE ALL FRONT LIGHT ON, THEN BY PUSHING BUTTON BELOW ONCE WILL THE BE LEFT FRONT LIGHT ONLY, THEN PUSH AGAIN WILL GIVE YOU RIGHT FRONT LIGHT ONLY, PUSH AGAIN WILL GIVE YOU CENTRE FRONT LIGHT ONLY.

*You can do the same with all other RED Playback Faders channels, simultaneously to get the look you want on stage*

INGLEWOOD CIVIC CENTRE

PHOTO # 4



INGLEWOOD CIVIC CENTRE

PHOTO #5





Ensure ENTTEC "D SPLIT" is powered .

GPO for LED Stage Lighting turn off after event

Power switch for three phase power to dimmer rack. Turn Clockwise to TURN ON please ENSURE it is TURNED OFF after the event.

Inglewood Civic Centre

PHOTO #6